
Installation Instructions Core 4" Rectangular 2 Light - Flanged Trim / Universal Specialty Ighting industries

Cautions and Warnings


- **1.** This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- 2. Power must be OFF when connecting the fixture. "hot plugging" devices will damage the LED source.
- The light engine is low voltage and is factory wired to the driver DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- **4.** Polarity is important. Black must be connected to black and red connected to red.

Step A

 Mount housing to structure using included hanger bars. Adjust butterfly bracket position using internal wing nut to bottom of slot, so that housing is in highest position with respect to butterfly bracket. Mount housing so face of throat is 1/4" above elevation of finished ceiling. In this position housing will be able to be adjusted so that the face of throat can meet the final elevation of finished ceiling.

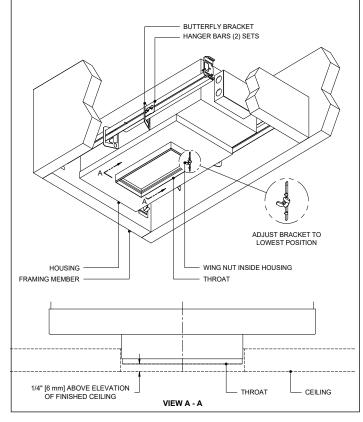


Step B

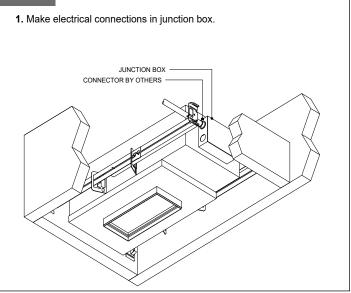

Step C

1. Cut rectangular cut-out in ceiling. Refer to drawing below for cut-out dimensions.

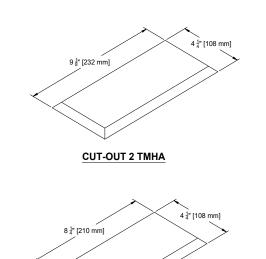

CUT-OUT 2 TMCA


** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE Click here to read full Care and Maintenance

Installation Instructions Core 4" Rectangular 2 Light - Flanged Trim / Universal Specialty lighting industries

for CR4MD-THMA and CR4MD-TMCA


Step D

1. Install ceiling assuring cut-out aligns with center of housing throat. Lower housing by loosening internal wing nut on butterfly bracket and moving housing down until face of throat meets face of ceiling.

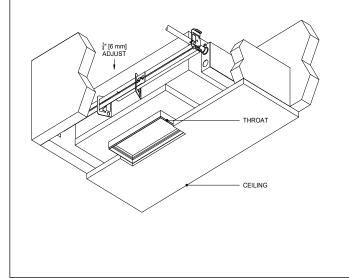


Step E

1. Push trim into throat until springs catch the top of the throat and flange of the trim is flush against the ceiling. For zero trim push trim into throat until ball plungers catch the retainers.

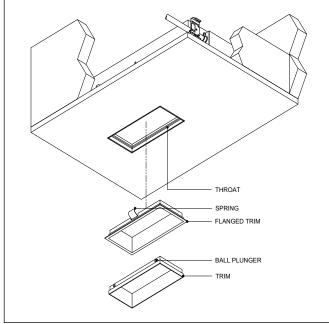

Step F

1. For flanged trim ensure is properly secured with the springs. If trim is not flush with finshed ceiling, remove trim by pulling downward on trim until springs disengage from throat. Loosen wing nuts inside housing and move housing up or down as required, re-tighten wing nuts. Re-install trim.

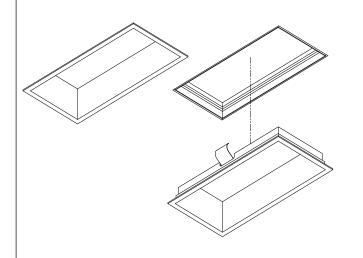

Step G

2. For flangeless trim, ensure trim is properly secured with the ball plungers. If trim is not flush with finshed ceiling, remove trim by pulling downward on trim until ball plungers disengage from throat. Loosen wing nuts inside housing and move housing up or down as required, re-tighten wing nuts. Re-install trim.

