for CF1D-RP-P (Pendant)




Cautions and Warnings

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.
- Power must be OFF when connecting the fixture. "hot plugging" devices will damage the LED source.
- The light engine is low voltage and must be connected to the Confetti Driver Box. DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER
- Polarity is important. Black must be connected to black and red connected to red.
- LEDs should be protected from dust and debris during during installation and maintenance.
- DO NOT daisy chain devices. Each light engine must be connected to a Confetti Driver Box port - 4 ports per Confetti Driver Box.
- Confetti is IC (insulated ceiling) rated but NOT for spray foam insulation.

What you will need


- 1. Components in the box
- Confetti Counter Bore Hole Saw (CFCBHS) availab purchase - contact your local sales representative for ordering instructions.
- Connectors compatible with 22ga. AWG, lever nut recommended
- **4.** (2) #6 drywall screws ≤ 1" in length.
- 5. Construction adhesive.
- 6. Painter's tape.

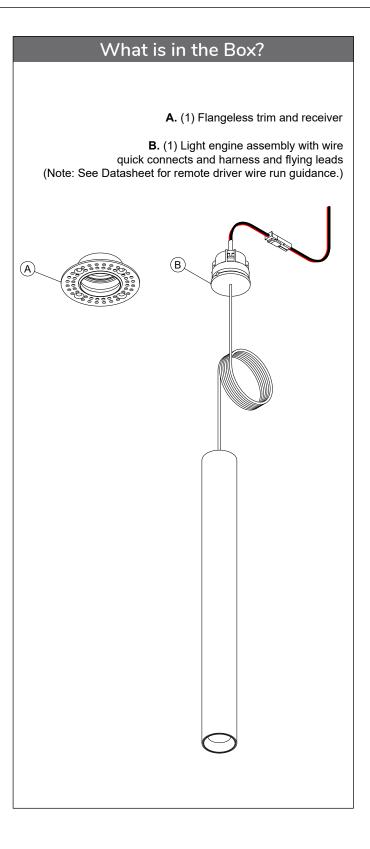


** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE

Click here to read full Care and Maintenance



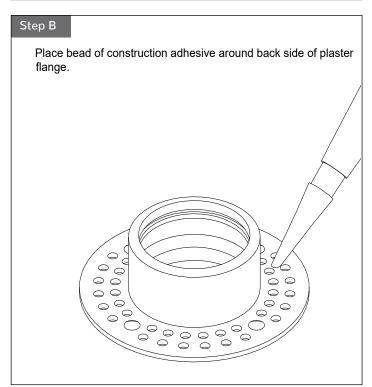

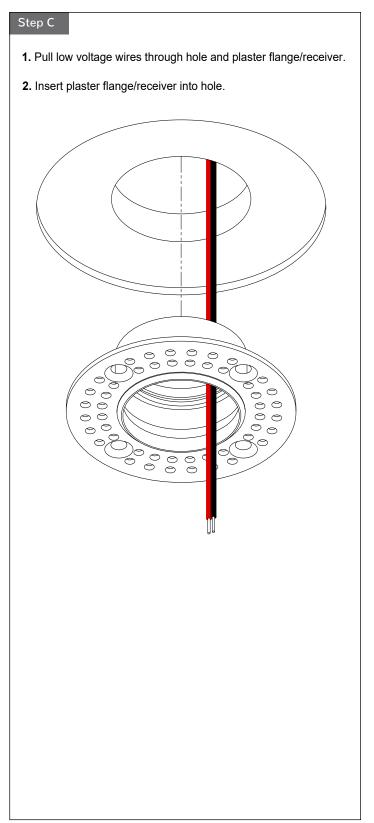



for CF1D-RP-P (Pendant)



Step D


- Fasten plaster flange/receiver to drywall with two #6 drywall screws.
- **2.** Remove any extra constrution adhesive protruding below surface of plaster flange/receiver.

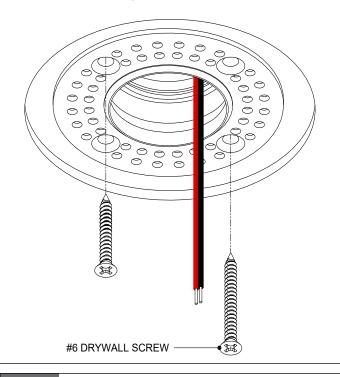

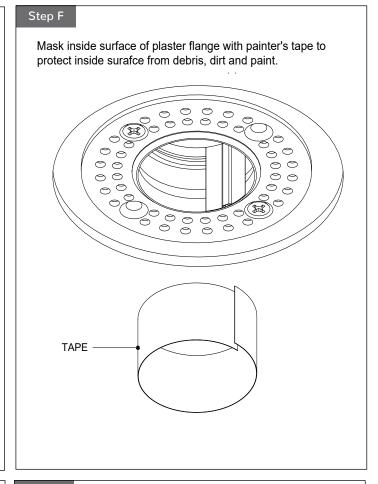


Step E

Secure low voltage wires to inside of plaster flange/receiver with tape. Allowing access after ceiling is finished.

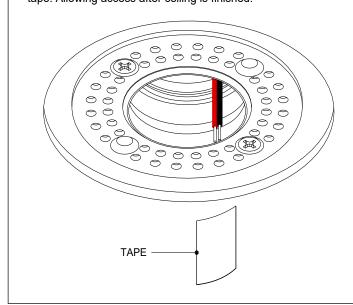

Step G

- 1. Apply and finish joint compound over plaster flange to create flush continuous surface.
- Paint ceiling assuring no paint enters inside of plaster flange/ receiver.

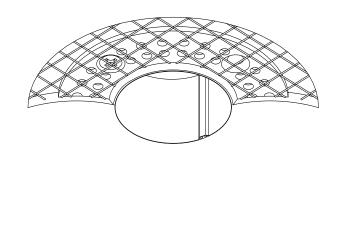


Installation Instructions Confetti Round Flangeless

for CF1D-RP-P (Pendant)



Step H


- 1. Remove tape from inside plaster flange/receiver assuring no contaminates or residue are inside receiver.
- 2. Pull low voltage wire through plaster flange/receiver hole.
- Connect leads from light engine to their respective leads with connectors. ASSURE RED (+) IN CONNECTED TO RED AND BLACK (-) IS CONNECTED TO BLACK.

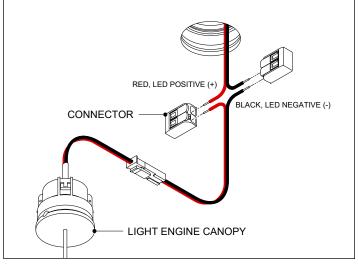

Step J


- 1. Ensure plastic attachment clips are in the down position.
- 2. Insert the light engine canopy into the plaster flange/receiver. Assure the light engine is "square" with trim/receiver and apply even pressuere with both thumbs until the light engine canopy snaps into place.

Note: Assure device is in first 'snap' position. Pushing past to the second 'snap' position will deploy clips to replacement mode and allow fixture to drop from receiver.

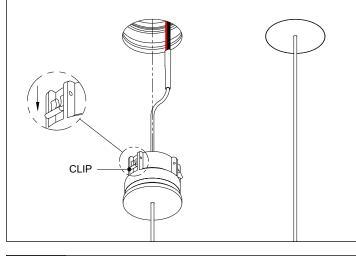

Step I

- 1. Adjust cable to length
 - a. Loosen hex screw on the side of canopy attachment with included 2mm hex wrench.
 - b. Move light engine canopy up or down coaxial cable to desired length and tighten hex screw. Do not over overtighten set screw. Doing so may break or short cable.
 - c. Feed excess wire up through hole. It is not recommended that the pendant cable is trimmed to length.

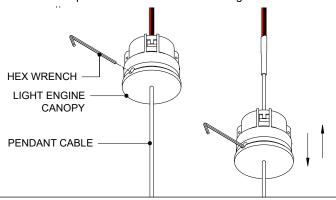

Step K

To remove light engine apply even upward pressure until you hear the clips 'snap' to second position. The light will drop down through the hole. Repeat step "J" to reinstall light engine.

