for CF1 Type D-SF (Fixed Downlight), WW-S (Square Wall Wash)




Cautions and Warnings

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.
- Power must be OFF when connecting the fixture. "hot plugging" devices will damage the LED source.
- The light engine is low voltage and must be connected to the Confetti Driver Box. DO NOT CONNECT LIGHT ENGINE TO MAINS AC POWER.
- **4.** Polarity is important. Black must be connected to black and red connected to red.
- **5.** LEDs should be protected from dust and debris during during installation and maintenance.
- DO NOT daisy chain devices. Each light engine must be connected to a Confetti Driver Box port - 4 ports per Confetti Driver Box.
- Confetti is IC (insulated ceiling) rated but NOT for spray foam insulation.

What you will need

- 1. Components in the box
- 2. 1-5/8" diameter hole saw
- 3. Tool suitable for finishing square hole
- Connectors compatible with 22ga. AWG, lever nut recommended

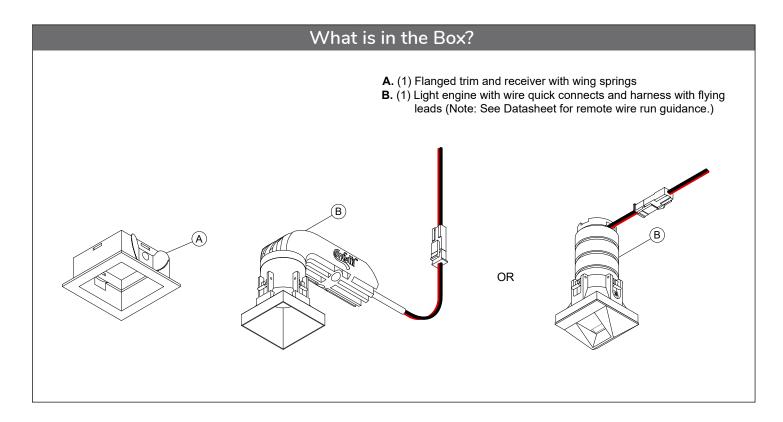


** LED'S SHOULD BE PROTECTED FROM DUST AND DEBRIS DURING INSTALLATION AND MAINTENANCE

Click here to read full Care and Maintenance




Step A


Cut 1-5/8" [41 mm] square cutout in ceiling with hole saw and suitable tool squaring corners.

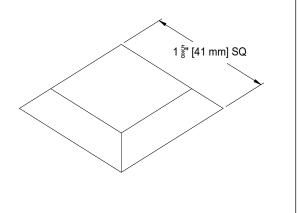


Step B

- 1. Pull low voltage wire through hole and trim.
- Depress wing spring with fingers. (Caution: wing springs are sharp)
- Insert trim/receiver into cutout allowing wing springs to deploy during insertion.

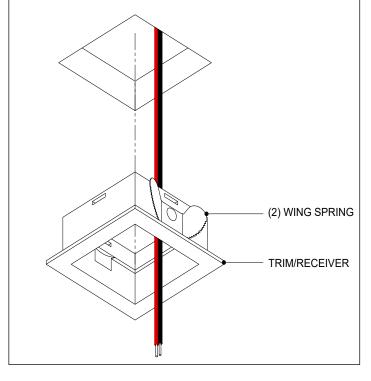

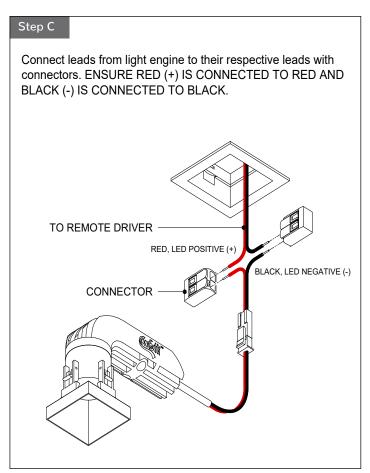

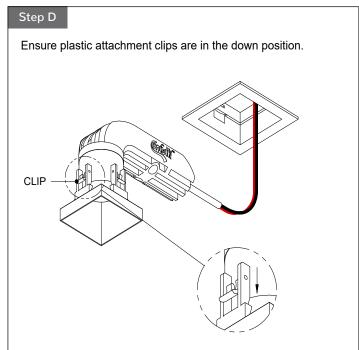

Installation Instructions Confetti Square Flanged






Step E

Insert the light engine into the flange/receiver. Assure the light engine is "square" with trim/receiver and apply even pressure with both thumbs until the light engine snaps into place.

Note: Ensure device is in first 'snap' position. Pushing past to the second 'snap' position will deploy clips to replacement mode and allow fixture to drop from receiver.

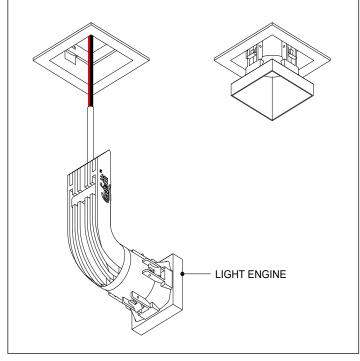

Step F

To remove light engine apply even upward pressure until you hear the clips 'snap' to second position. The light will drop down through the hole. Repeat steps "D" and "E" to reinstall light engine.

